# 3-1. Using the touch screen

# **Touch screen**

By touching the screen with your finger, you can control the audio system and air conditioning, adjust the screen display etc.

With navigation system

| CLIMATE | CLIMATE | COCK | DEST | DES



The "Information" screen shown in the above illustration is displayed when

is pressed.

240

Switches	Page
"CLIMATE"	P. 248
"AUDIO"	P. 258
"INFO" (Displaying the "Information" screen)	P. 240
"DISP" (Adjusting the display)	P. 244
Trip information (Displaying the "Energy Monitor/Consumption" screen)	P. 29
Maintenance	Navigation System Owner's Manual
Telephone	P. 328
Calendar	Navigation System Owner's Manual
"LEXUS Park Assist"	P. 204
Language	P. 243
Screen Setting	P. 246
Beep Off	P. 243
Adjust Clock	P. 381/ Navigation System Owner's Manual

## The initial screen



If the "POWER" switch is set to ACCESSORY or ON mode, the initializing screen will be displayed for a few seconds as the system starts up.

#### $\, n \,$ To avoid damaging the touch screen

- 1 Touch the screen lightly with your finger. If there is no response, remove your finger from the screen and try again.
- 1 Remove any dirt on the screen by wiping with a soft cloth. Do not use detergent.

#### ${\it n}$ When using the touch screen

- 1 If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- 1 The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display" screen or remove your sunglasses.

# 3-1. Using the touch screen Setting the touch screen

You can change the touch screen to your desired settings.

## Language settings

The language used for all voice guidance, messages and touch screen switches may be changed.

STEP 1 Press INFO

STEP 2 Touch on the "Information" screen.



Select the desired language.

Interior features

STEP 4 Touch OK

## Turning off the beep sound

The beep that sounds when a touch screen button is touched can be turned off.

STEP 1 Press INFO.



Touch Beep Off.

243

# Adjusting the display

STEP 1 Press PISP.

If you do not touch the screen for 20 seconds the system will return

If you do not touch the screen for 20 seconds, the system will return to the previous screen.

## ▶ With CD player



# ► With DVD player





244

## n "Day Mode"



When the headlights are turned on, the screen dims. However the screen can be switched to "Day Mode".

The screen will stay in "Day Mode" when the headlights are turned on until is touched again.

If the instrument panel light control is set to "MAX", "Day Mode" is not displayed.

## $\, n \,$ To turn off the picture display

If some is touched, the screen display is turned off, and guidance is by voice only.

#### 3-1. Using the touch screen

## Screen settings



STEP 2 Touch on the "Information" screen.

The following screen settings can be changed.



#### Automatic transition

20 seconds after air conditioning or audio system use, the system will return the display to the previous screen.

2 Switch color

You can select the switch color.

Delete personal data

The following personal data is deleted:

- User selection settings
- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code
- Maintenance conditions\*
- Maintenance information off setting\*
- Memory points\*
- Areas to avoid\*
- Previous points\*
- Route trace\*
  - \*: If the navigation system is equipped




STEP 2 Touch OK.

n Setting the switch color



STEP 2 Touch OK.

n To delete personal data

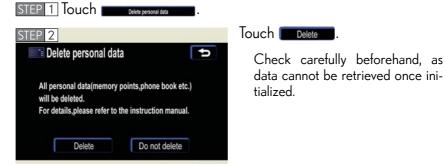

3

Interior features

 $n\ \ \text{When deleting personal data}$ 

Data can only be deleted when the vehicle is stopped.

n When selling the vehicle

Be sure to initialize both the call history and personal data.  $(\rightarrow P. 246)$ 

n If you touch 🔼

The display returns to the previous screen.